


SEE VIEW
'A'

PLEASE NOTE:

- 1) FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE
- 2) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- 3) ALTERATION OR MODIFICATION OF EQUIPMENT MAY BE HAZARDOUS. FOR REPAIR OR REPLACEMENT, PLEASE CALL YOUR DEALER

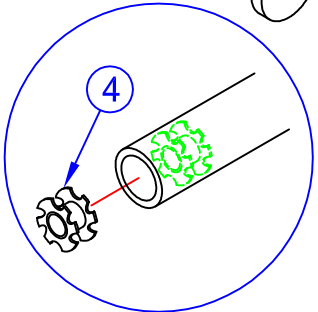

VIEW 'A'

<p>MODEL NO.: EC-500</p>	
<p>PRODUCT NAME: VOLLEYBALL CARRIER</p>	
<p>DRAWN BY: JAC</p>	<p>EFFECTIVE DATE: 5/23/2011</p>

VOLLEYBALL STANDARD CARRIER, EC-500
LIST OF MATERIALS

<u>PIECE NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	5" STEM MOUNTED SWIVEL CASTER WHEEL	4
2	SIDE FRAME ASSEMBLY	2
3	2" x 2" END PLUG (FACTORY INSTALLED)	4
4	TUBE INSERT (FACTORY INSTALLED)	8
5	M8 x 80mm MACHINE SCREW ZP	8
6	CROSSBAR	4
7	J HOOK COVERS (FACTORY INSTALLED)	8

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED: FLAT BLADE SCREWDRIVER
RUBBER Mallet OR WOOD BLOCK

- 1) ASSEMBLE THE CROSSBARS (6) TO THE SIDE FRAME ASSEMBLIES AS SHOWN IN THE ILLUSTRATION USING THE M8 x 80mm MACHINE SCREWS (5). TIGHTEN SECURELY AFTER FRAME IS COMPLETELY ASSEMBLED.

- 2) FIRMLY SLIDE EACH STEM CASTER (1) INTO THE SOCKET IN THE BOTTOM OF EACH SIDE FRAME LEG. THE CASTER MUST BE FULLY SEATED IN THE SOCKET FOR THE UNIT TO ROLL PROPERLY.